



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

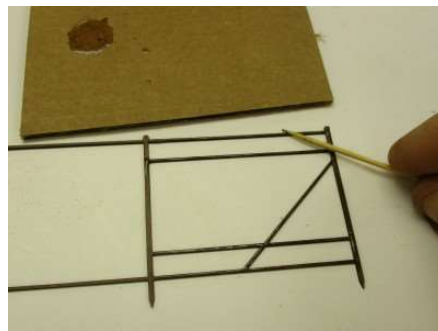


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

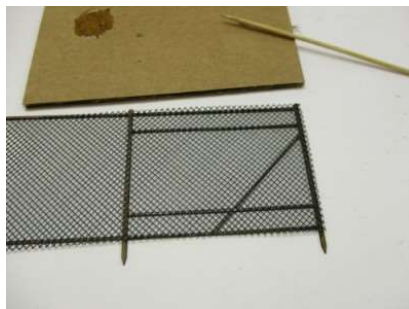


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

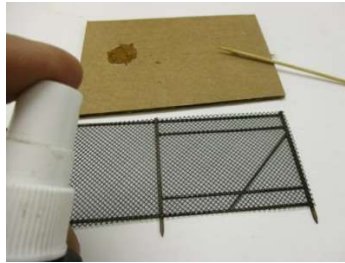


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

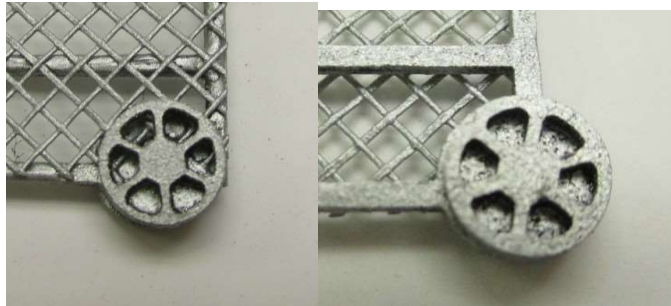


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

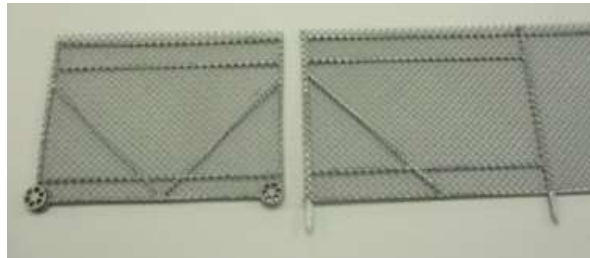


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

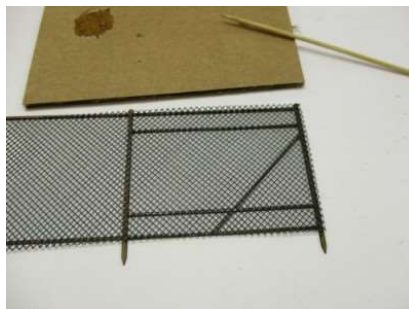


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

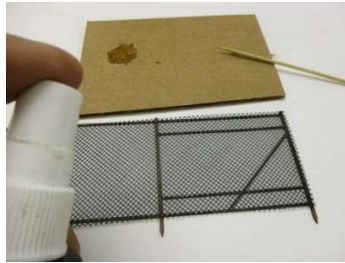


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

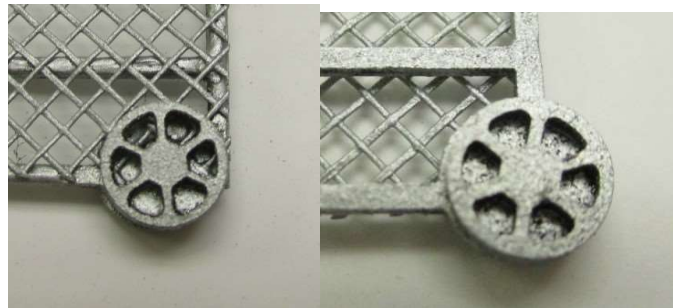


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

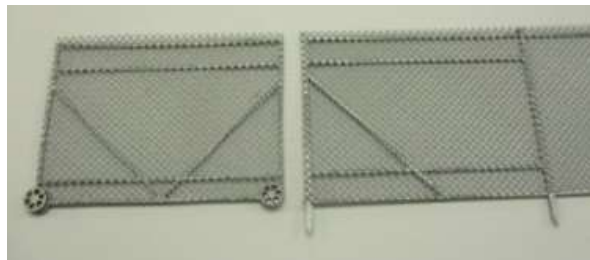


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

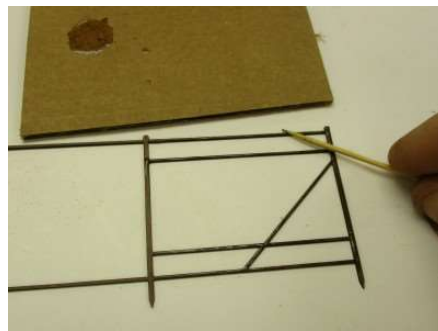


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.



Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

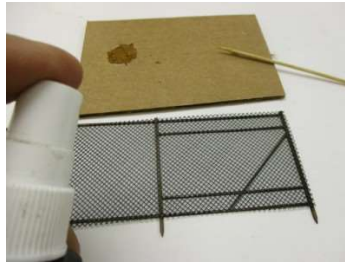


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

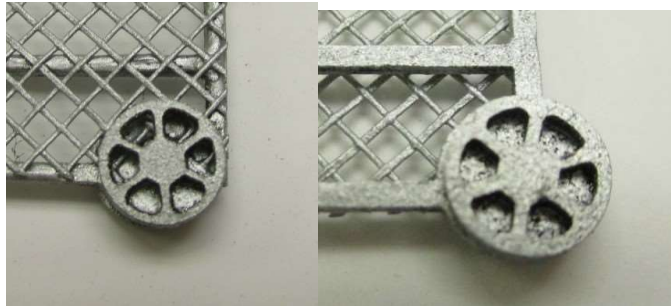


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

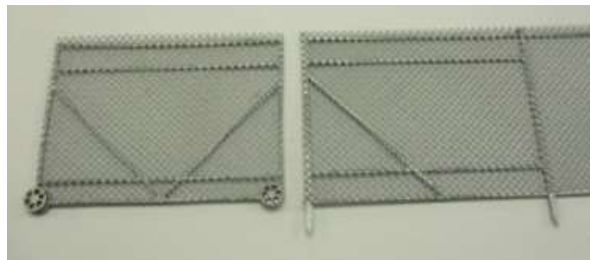


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.



Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

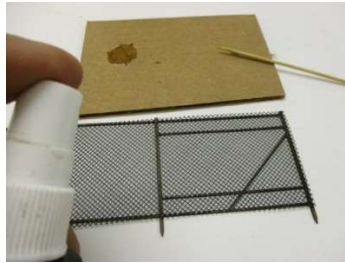


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

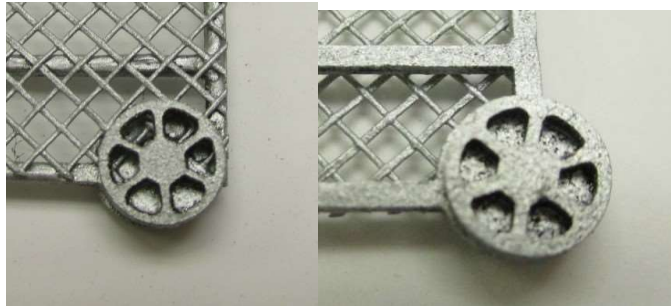


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

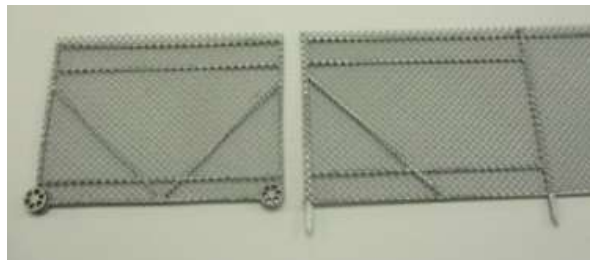


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

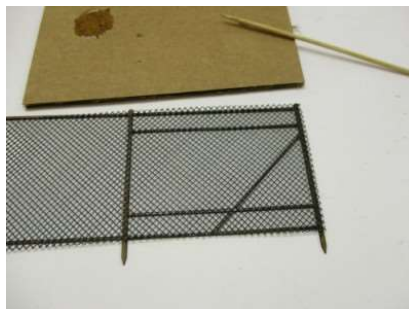


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

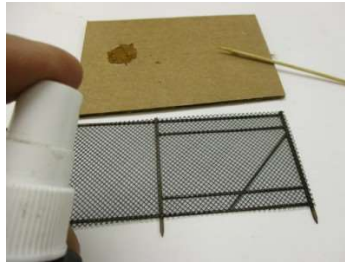


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

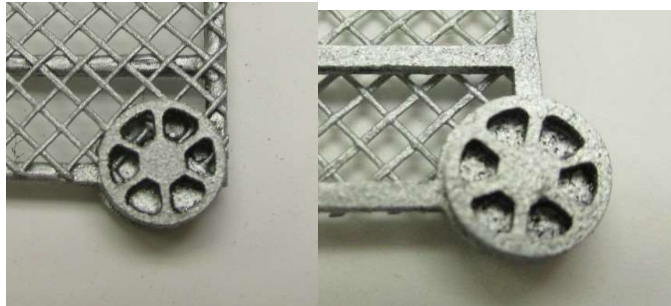


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

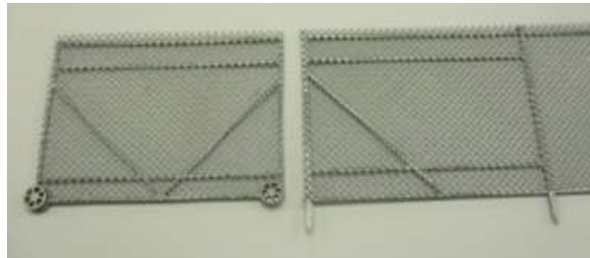


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

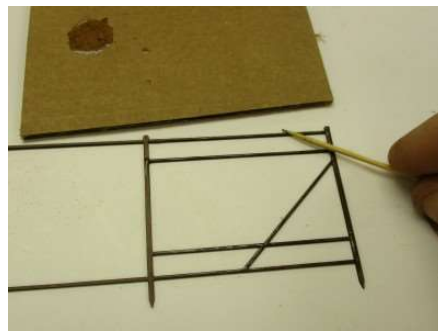


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

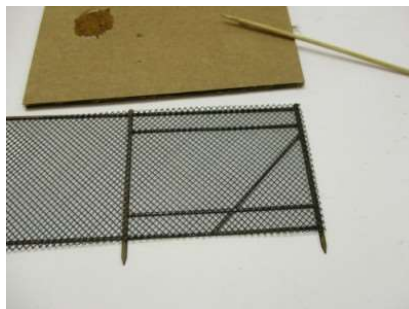


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

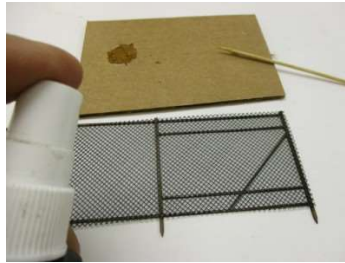


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

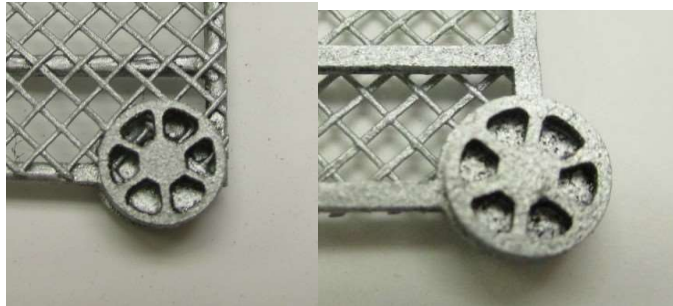


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

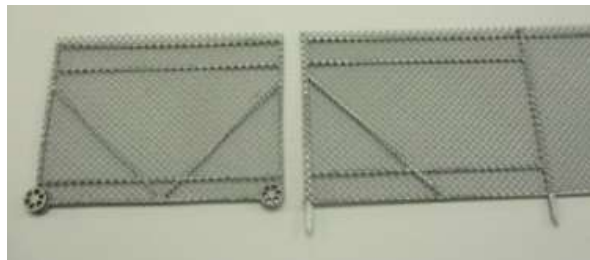


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

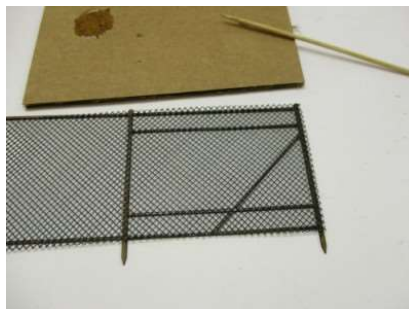


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

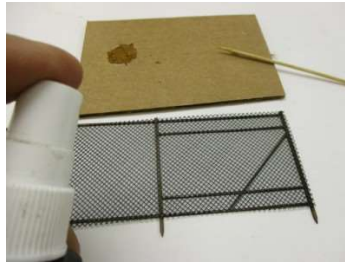


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

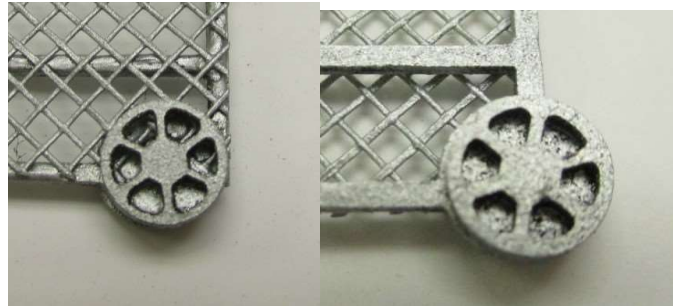


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

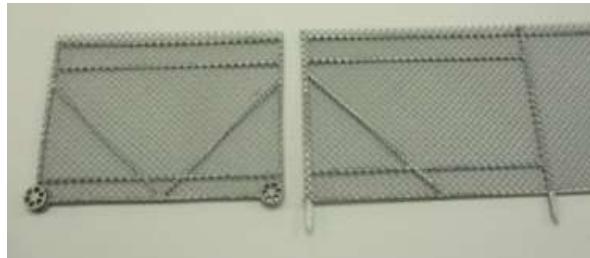


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

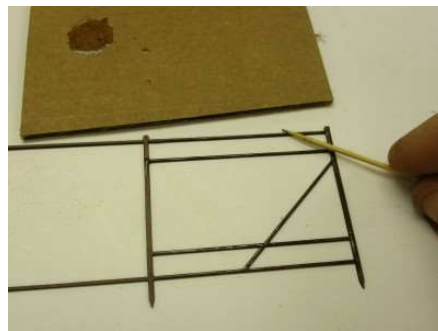


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

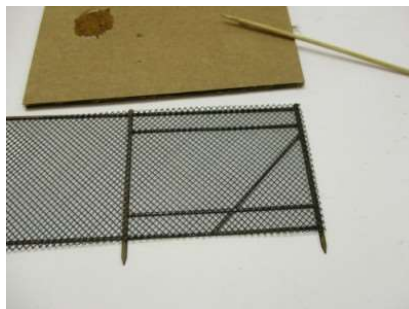


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

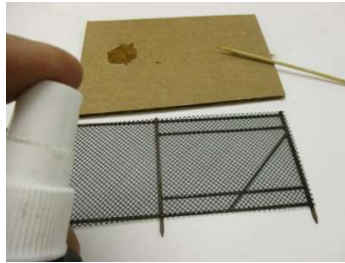


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

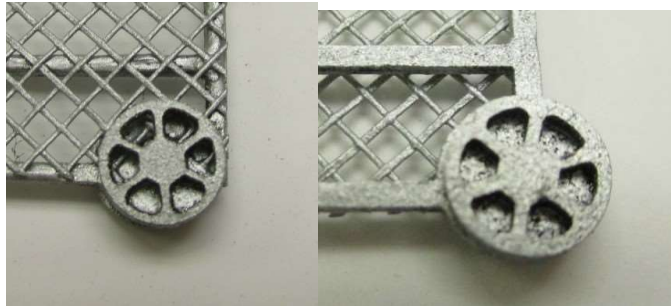


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

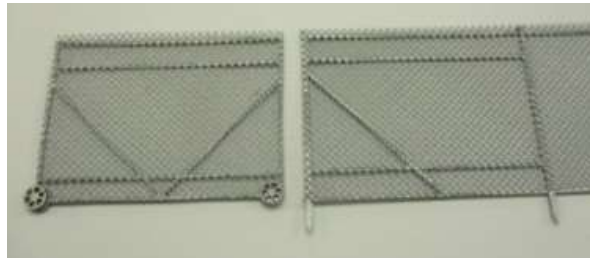


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

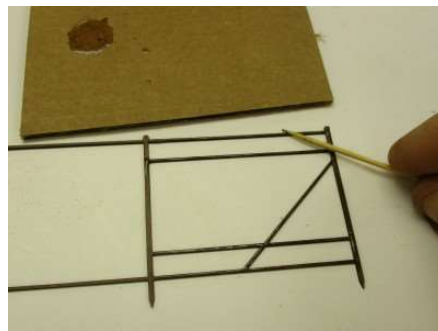


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

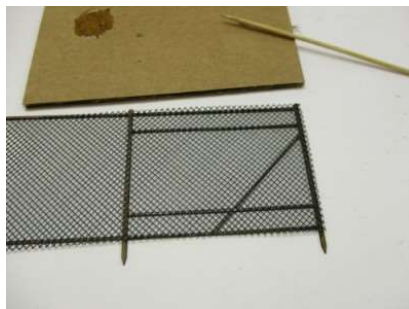


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

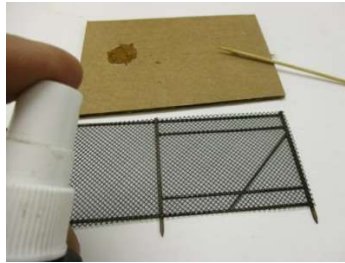


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

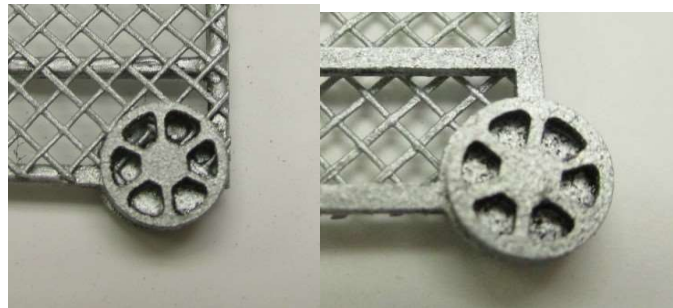


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

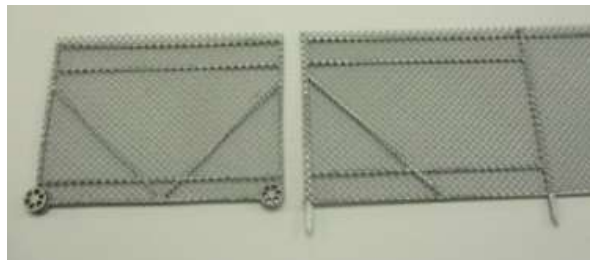


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

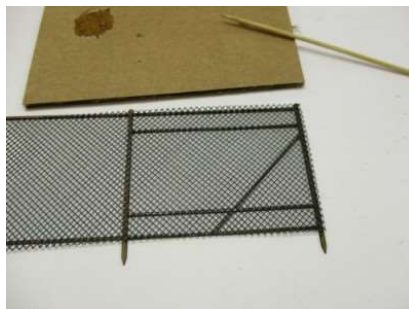


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

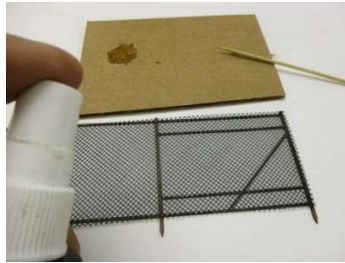


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

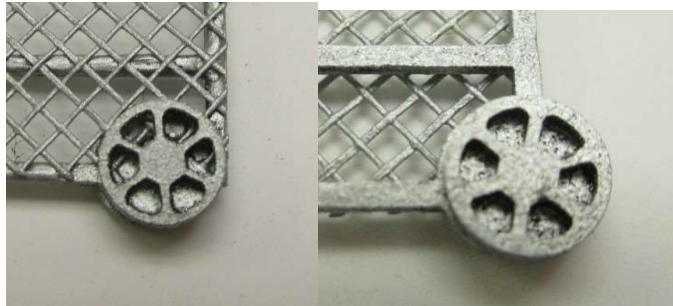


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

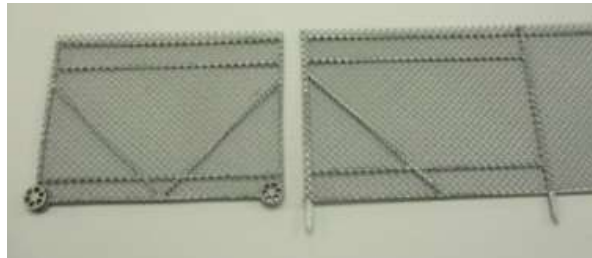


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

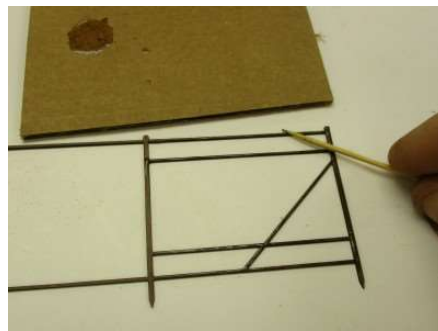


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.



Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

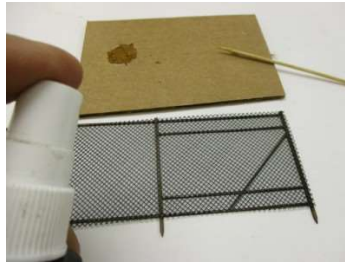


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

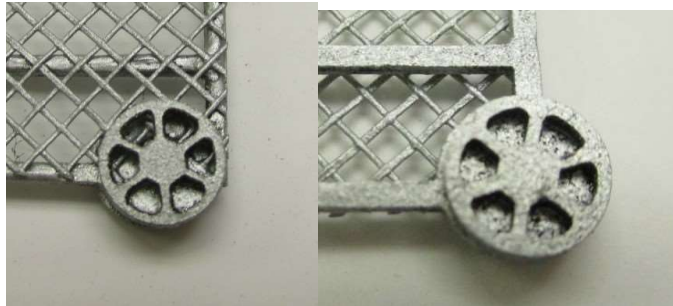


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

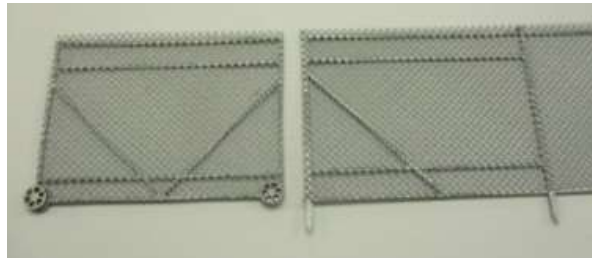


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.



Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

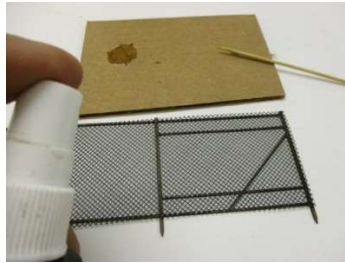


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

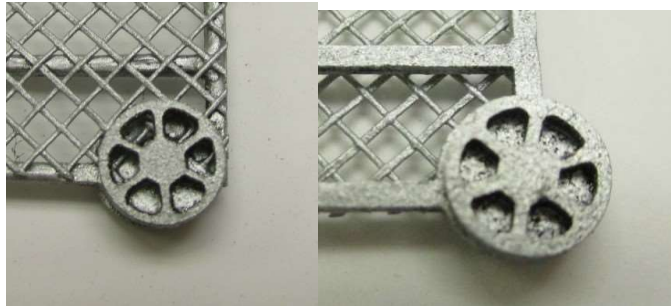


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

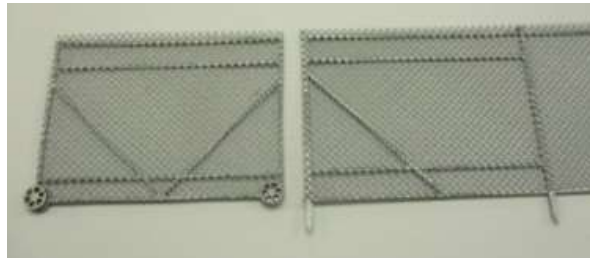


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

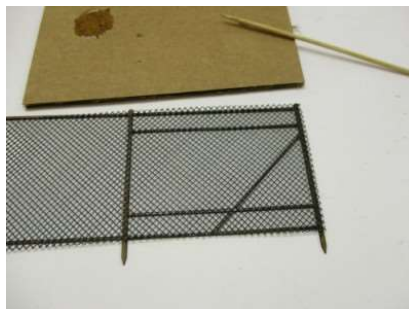


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

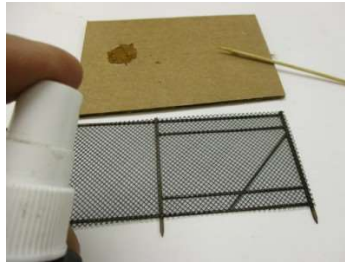


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

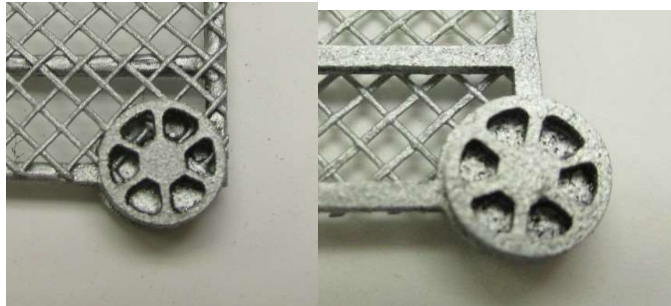


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

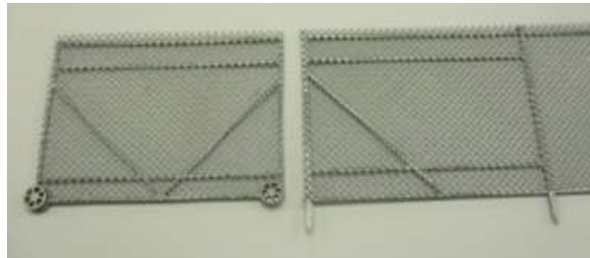


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

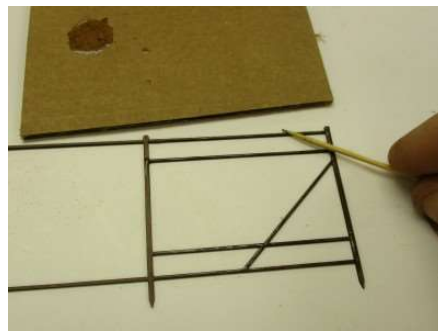


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

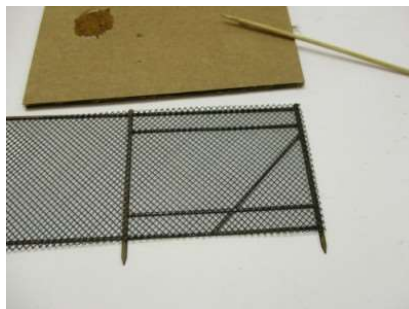


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

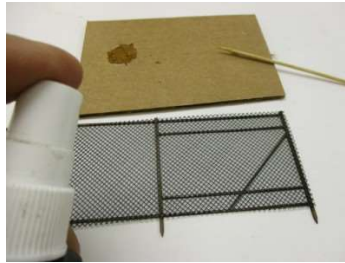


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

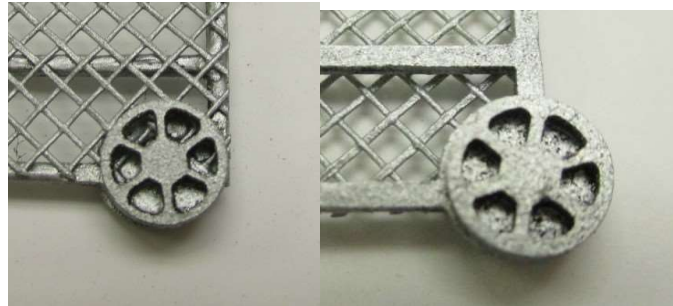


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

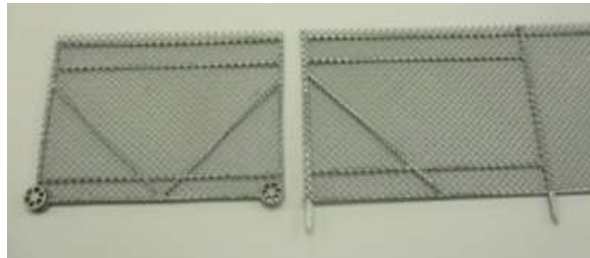


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

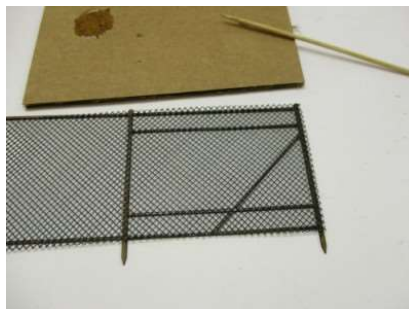


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

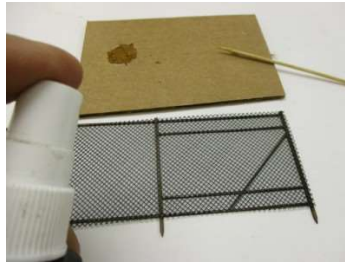


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

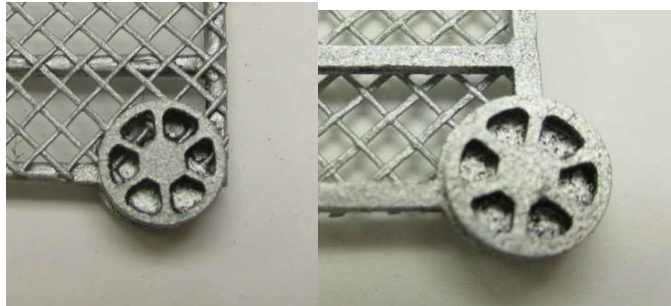


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

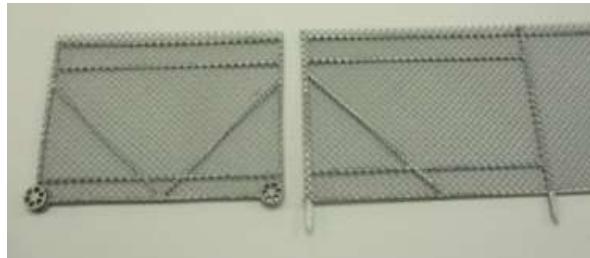


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

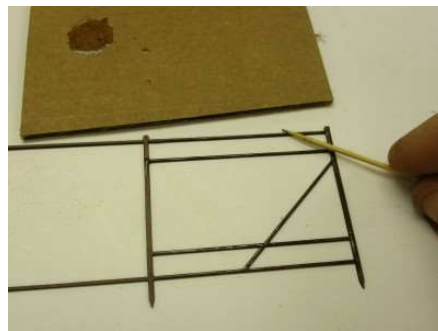


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

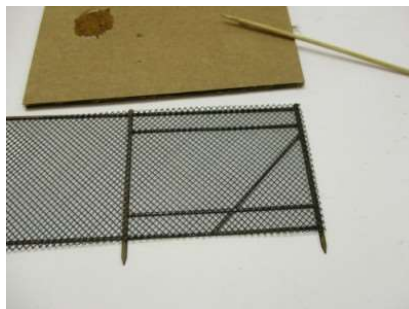


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

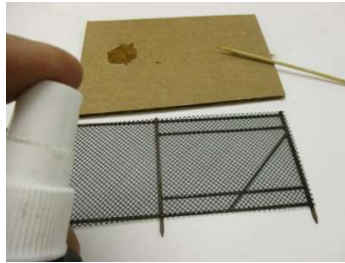


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

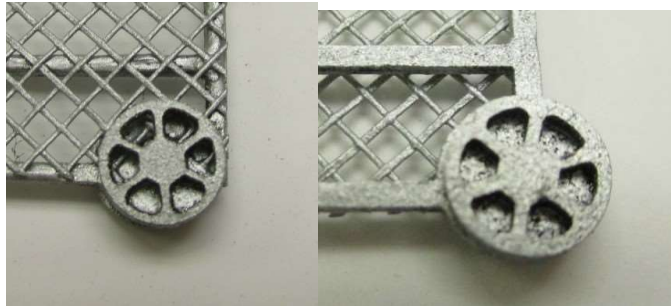


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

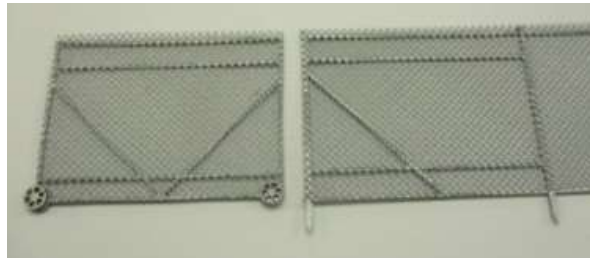


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

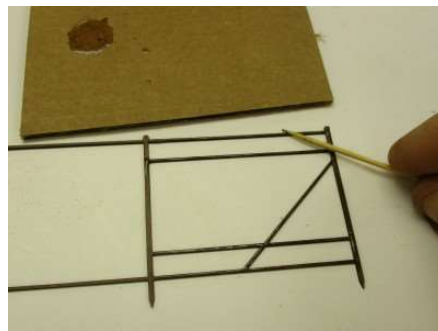


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

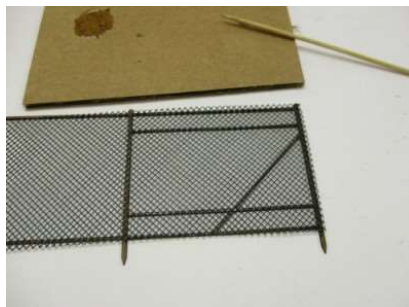


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

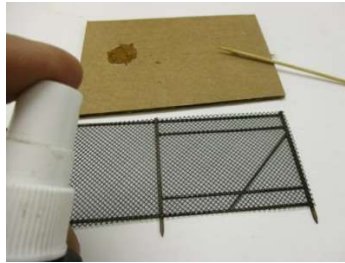


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

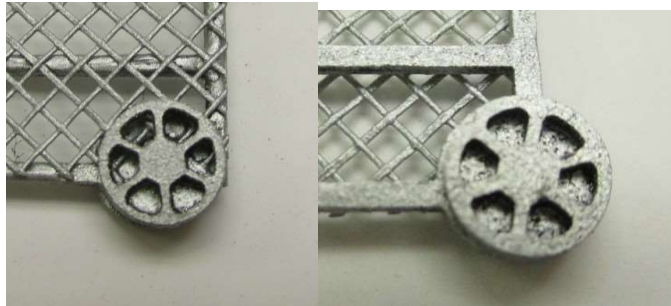


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

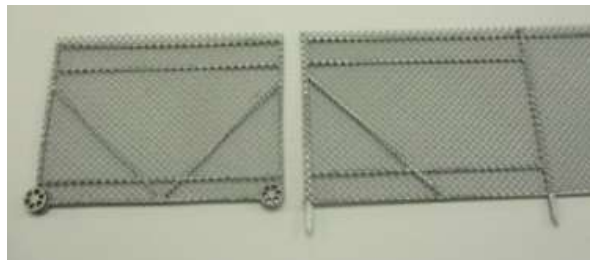


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.

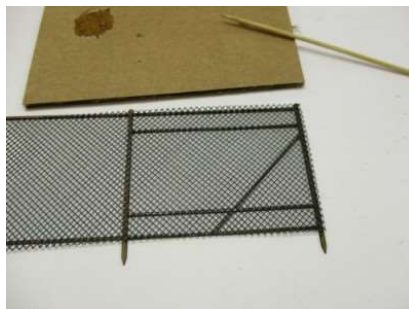


Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

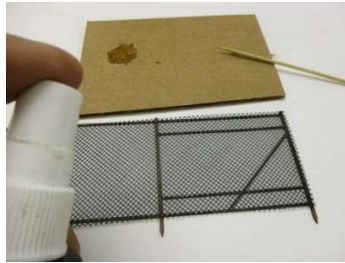


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

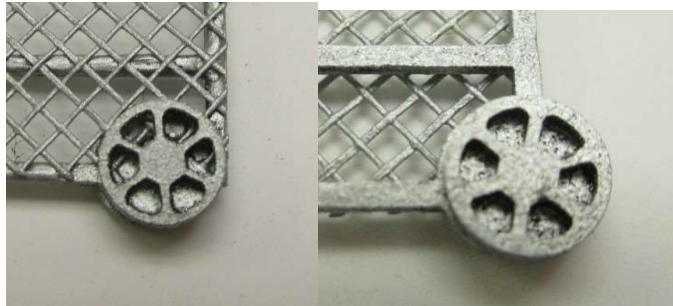


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

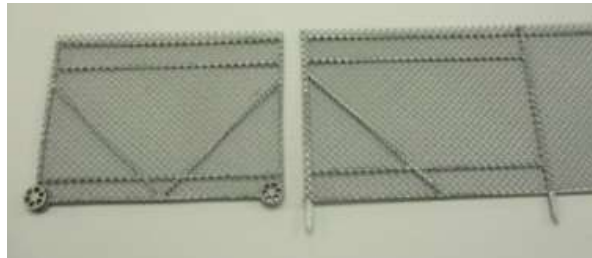


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)

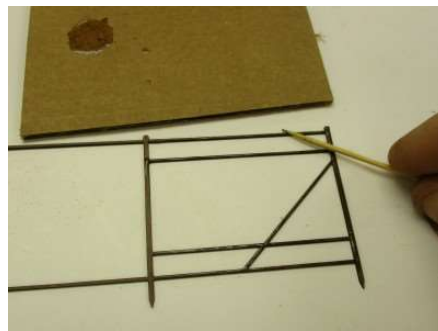


Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.



Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

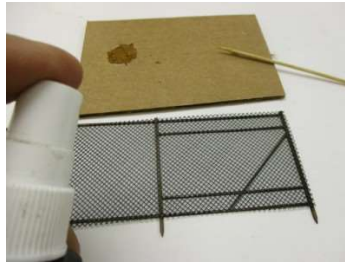


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

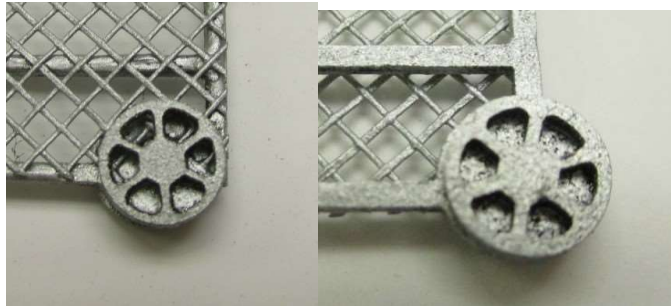


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

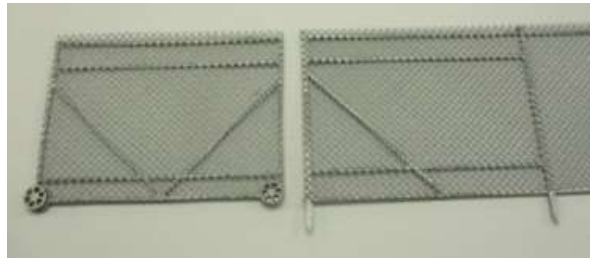


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com



TWX-2120 Chain Link Fence Kit Assembly Instructions

Contents:

- 3-15" Fence Frames
- 2-15" Fence Frames with gate bracing
- 2-2 ½" Gates
- 8- Gate Wheels
- 5-fence Screens
- 2-Gate Screens
- 1-Post Hole Jig
- 1-Assembly Instructions
- 1-Warning placards & No Trespassing Signs

Tools required for assembly;

- Medium Viscosity Super Glue
- Cyanoacrylate Accelerator (Super Glue Kicker)
- Several Toothpicks
- Scrap cardboard (to place glue on for assembling)

- 1.) Place a small puddle of medium viscosity super glue on a piece of scrap cardboard. Using a toothpick carefully apply a small coat of super glue to one side of the fence frame. (photo 1)



Photo 1

- 2.) Carefully work one section of the fence frame at a time. Once the glue is applied with the toothpick place the screen with just a tiny bit of overhang so it can be trimmed if needed.



Photo 2

- 3.) Align the bottom edge of the screen with the bottom runner of the fence frame. Once in place quickly run your finger over the fence to ensure it is making contact with the frame. Using the kicker, spray the area you applied the glue to. This will immediately cure the glue and allow you to move on to the next section. Carefully glue the screen to the frame across each section, to prevent the glue from drying before adhering the screen to the frame. (Photo 3)

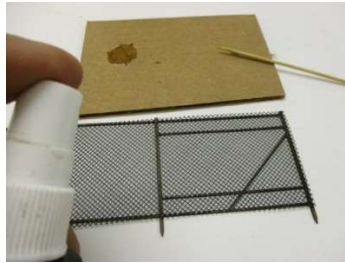


Photo 3

- 4.) Once you have completed the 5 fence sections repeat the process to glue to short screen sections to the rolling gates. Apply glue to the entire surface of one side of the frame, then attach the screen using the Kicker.
- 5.) Once the screen is adhered to the gates carefully glue the wheels to the gates using the super glue and kicker (Photo 4).

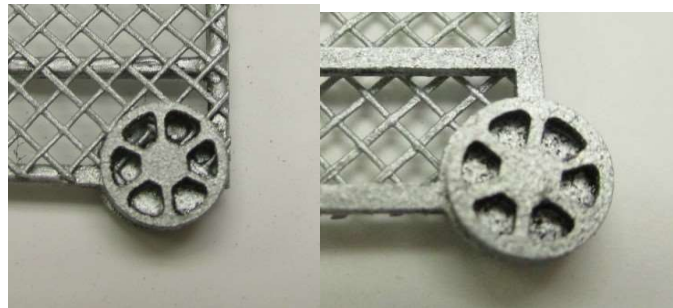


Photo 4

- 6.) Once assembled and painted use the Post Hole Jig to make holes in the layout to mount the fences vertically. It is your choice whether or not to glue the fences in the layout. The gates line up with the fence frames with gate bracing, as shown in photo 5.

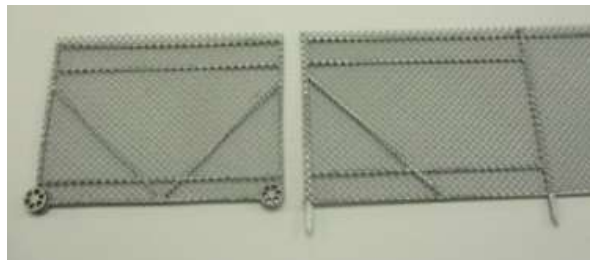


Photo 5

Look for more exciting TW Trainworx products on our website and follow us on our blog!

Blog.traindame.com

www.twtrainworxstore.com

