




There are two sets
(Left Rail & Right Rail)
of wheel locks on the Sprue Card.

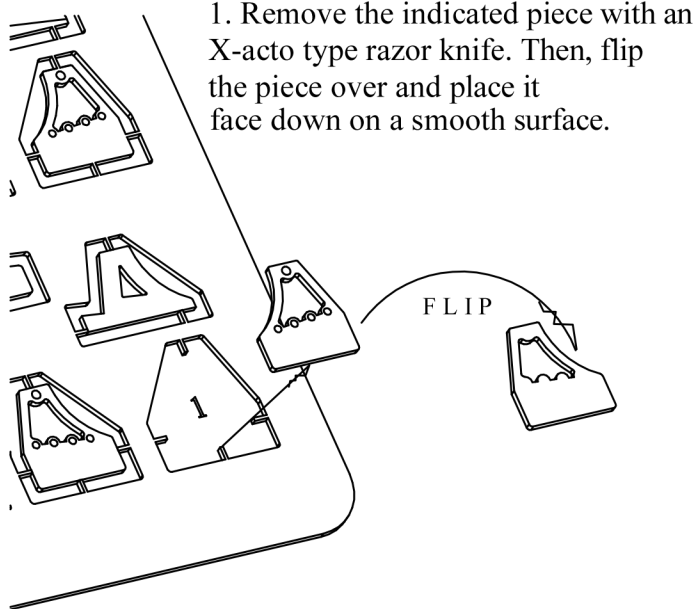

2. Remove the next piece, making sure all edges are smooth. Use a few spots of CA Glue (Super glue), and align the Top Center edges and the curved edge of the two pieces.

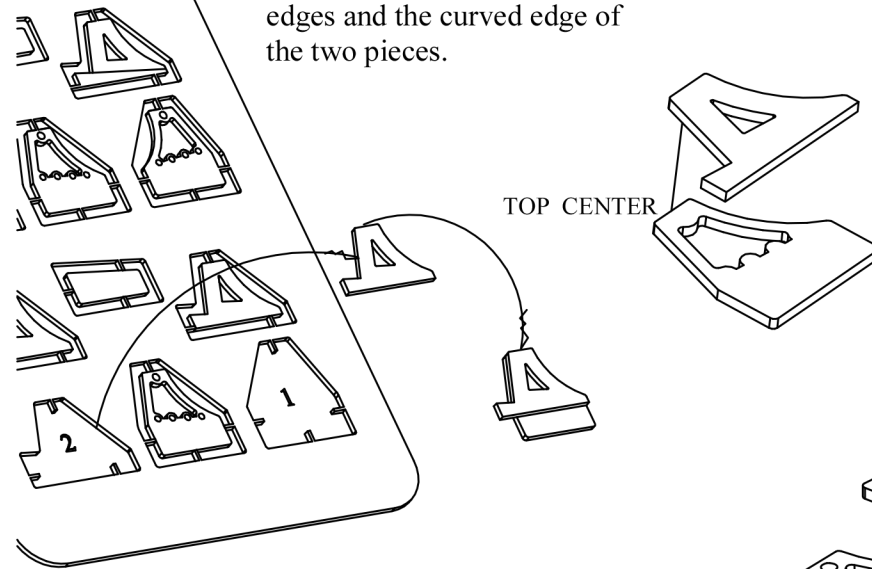

3. Continue to remove pieces from the Sprue Card applying CA Glue and stacking the pieces, making sure you align the Top Center Edges and curved edge of the first Five pieces.

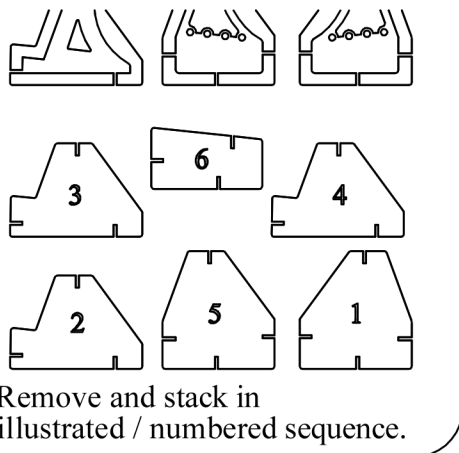

4. The last piece is applied at the Bottom Center of the previous piece.

