




STEP 4:
FENCE RAILS
Attach the fence rails to posts as shown.
First attach the corner posts, allow a few minutes for the glue to set, then attach the remaining posts.

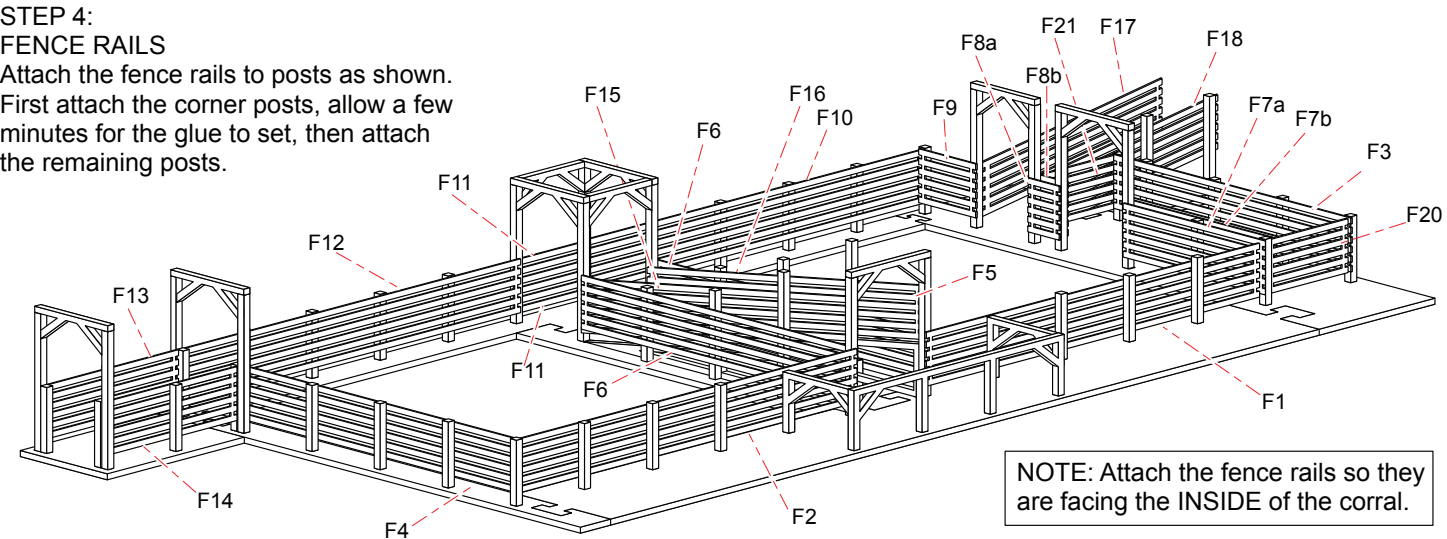

STEP 5:
DECKING
Place the deck panels as shown.

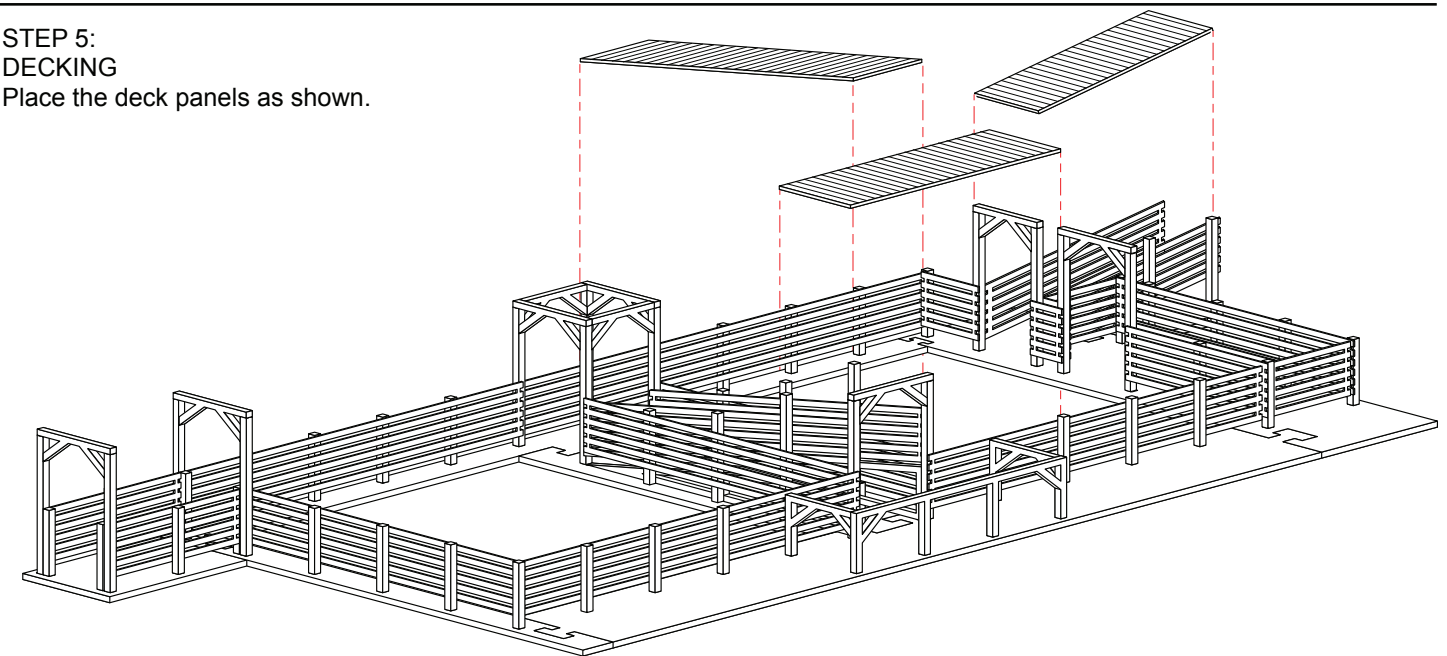

STEP 6:
SWING GATES & LADDERS
Assemble the gates and as shown in inset then place as depicted below.
Attach ladders to sides of loading dock.

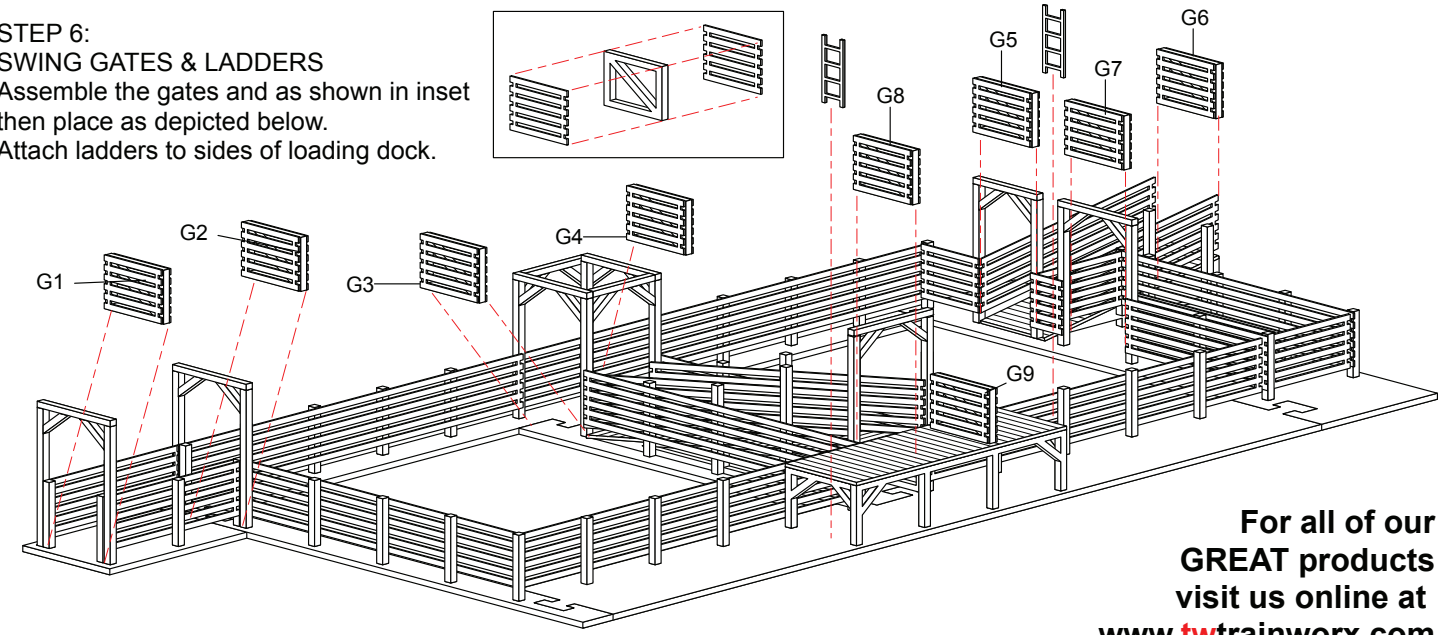


For all of our
GREAT products
visit us online at
www.twtrainworx.com



CORRAL / STOCK PEN KIT

CLS-87520

ASSEMBLY INSTRUCTIONS

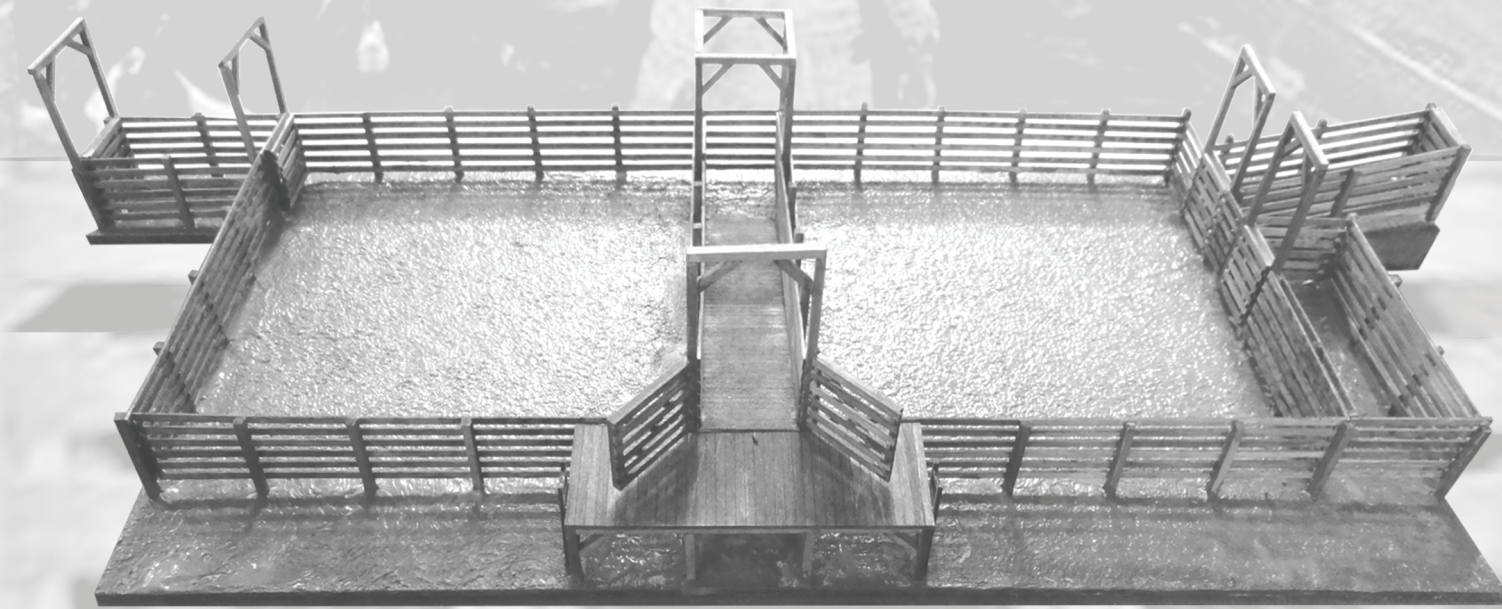

Thank you for purchasing TW Trainworx Stock Pen/Corral Kit.

Livestock shipped by rail required frequent rest and water stops, so structures like these were placed at intervals along the rail lines in all parts of the country. This is an accurate scale representation of a typical railway stock pen as used from the 1800s until the 1970s.

Study the drawings and steps carefully before assembly so that you are familiar with the parts and procedures detailed in these instructions. Use carpenters glue or CA for assembly. Check parts against the drawings below to ensure that nothing is missing. If any parts are missing or damaged, contact us and we will send replacements at no charge.

The kit may be painted or stained/weathered as you prefer. If you want the look of unpainted weathered wood, it is advisable to stain the parts before assembly and gluing, as the glue may keep the stain from covering completely. If you are painting the model this may be done after the kit is fully assembled using brush, airbrush, or spray cans. Board fences were typically whitewashed; some post-assembly weathering may also be desired.

Take your time and test-fit parts before final assembly. Allow two or three evenings for the assembly and painting of this model.

